

5. Programming Guide:

(1) How to get into Program Mode

Press ###: Red LED OFF, Green LED ON then press 123456 #
If you success, Red LED OFF and Green LED flash. Or Red LED ON and Green LED OFF means you are fail. Try again (Provided that you didn't change your default Program password. Default value is 123456_)

(2) How to change your Program password

Press 0 "new password" # "new password" # (new password must be in six digits format, please beware that you must be in program mode before you take this step)

(3) How to add card continuously with automatically card number assignment

Press 1 (swipe card... apply to unregistered card only) #
The controller will assign each registered card with individual card number (default password is 888888, it's just applied to Card and Password mode). You can change this password following by step.
If this is a new installed controller, the card number will be started at 0001, 0002 and so on.
If this controller have registered cards, the card number will be started after the last registered card' s number.
If this is a registered card, controller will Di(long) for warning, you still can continue your operation by swiping another new card.

(4) How to add card with card number (good for multi-cards operation as well)

Press 2 (swipe card... apply to unregistered card only) "card number" # (repeat this step until the last card) # Di(long) for warning, you still can continue your operation by swiping another new card.
If this is a registered card number, controller will Di(long) for warning, you still can continue your operation by entering another card number.

(5) How to delete card

Press 30 (swipe card) #
Means this swiped card is deleted (Apply to multi-card operation)

Press 31 (card number) # #
Means this card is deleted (Apply to multi-card operation)

Press 32 9999 #
Means all registered cards are deleted

(6) How to change access mode

Press 40 #Means this controller is in Card Or Password mode (Default value)
Press 41 #Means this controller is in Card And Password mode
Press 42 #Means this controller is in Password mode

(7) How to change door access duration

Press 503 # Means the duration is set to 3 seconds
If you set it to value 99, it will change to Card Open and Card Close operation.

(8) How to change access password (default value is blank, it is not activated yet)

Press 6 (new password) # (new password) # (it must be in 4-6 digits format)
Press 6 # #Password will be deactivated

(9) How to escape Program mode (Press * to escape the program mode)

(10) How to change card password (It apply to Card And Password mode only)

Press * (Green LED ON) (swipe registered card) (old password) (Red and Green LED flashed alternately) (new password) # (new password) #
If Green LED OFF, Di Di(short), it means you have changed this card's password.
If Di(long), it means you fail to complete this operation. Please try again.