

(11) How to reset to the factory default value (only apply to password and system parameters, no card will be deleted)
 Cut off the power, put the jumper JP1 in 2-3 position. Connect the power. After D1 Di(short), put the jumper JP1 in 1-2 position.

6. Sample operation:

(1) How to change program password to 789000 (from default password)
 First enter the program mode by press # # # # 123456 # (Green LED flashed)
 Press 0 789000 # 789000 #

Press * (escape the program mode)
 Please remember your new program password by heart. Use it with caution.

(2) How to add new cards in continue way
 First enter the program mode by press # # # # 123456 # (Green LED flashed)
 Press 1 (swape cards ... until the last card) #

Press * (escape the program mode)
 All added cards are ready to use.

(3) How to add two cards with card number 0088 and 0099
 First enter the program mode by press # # # # 123456 # (Green LED flashed)
 Press 2 (swape card) 0088 # (swape card)

0099 # #
 Press * (escape the program mode)

(4) How to delete cards numbered 0088 and 0099
 First enter the program mode by press # # # # 123456 # (Green LED flashed)
 Press 3 (0088 #0099 # #

Press * (escape the program mode)
(5) How to change access mode to Card Only mode
 First enter the program mode by press # # # # 123456 # (Green LED flashed)
 Press 40 #

Press * (escape the program mode)

(6) How to change general access password to 147258

First enter the program mode by press # # # # 123456 # (Green LED flashed)
 Press 6 147258 # 147258 #
 Press * (escape the program mode)

(7) How to change the card password to 888999 (should use with Card And Password mode)

Press * (Green LED ON) (swape registered card) (888999) (Red and Green LED flashed alternativaly) (888999) # (888999) #
 If Green LED OFF, D1 Di(short), it means you have changed this card's password.
 If D1(ong), it means you fail to complete this operation. Please try again.

7. Wiring Assignment

7 pins socket (Power Source Socket)

Red	+12V		
Black	GND		
Yellow	NC		
White	COM		Dry contact Output
Blue	NO		
Green	OPEN		
Green	GND		Push / Exit Button

5 pins socket (Additional Reader Socket)

Red	+12V	
Black	GND	
Green	D0	
White	D1	
Blue	LED BUZZER	