


X-10

SLIDING GATE CONTROL PANEL

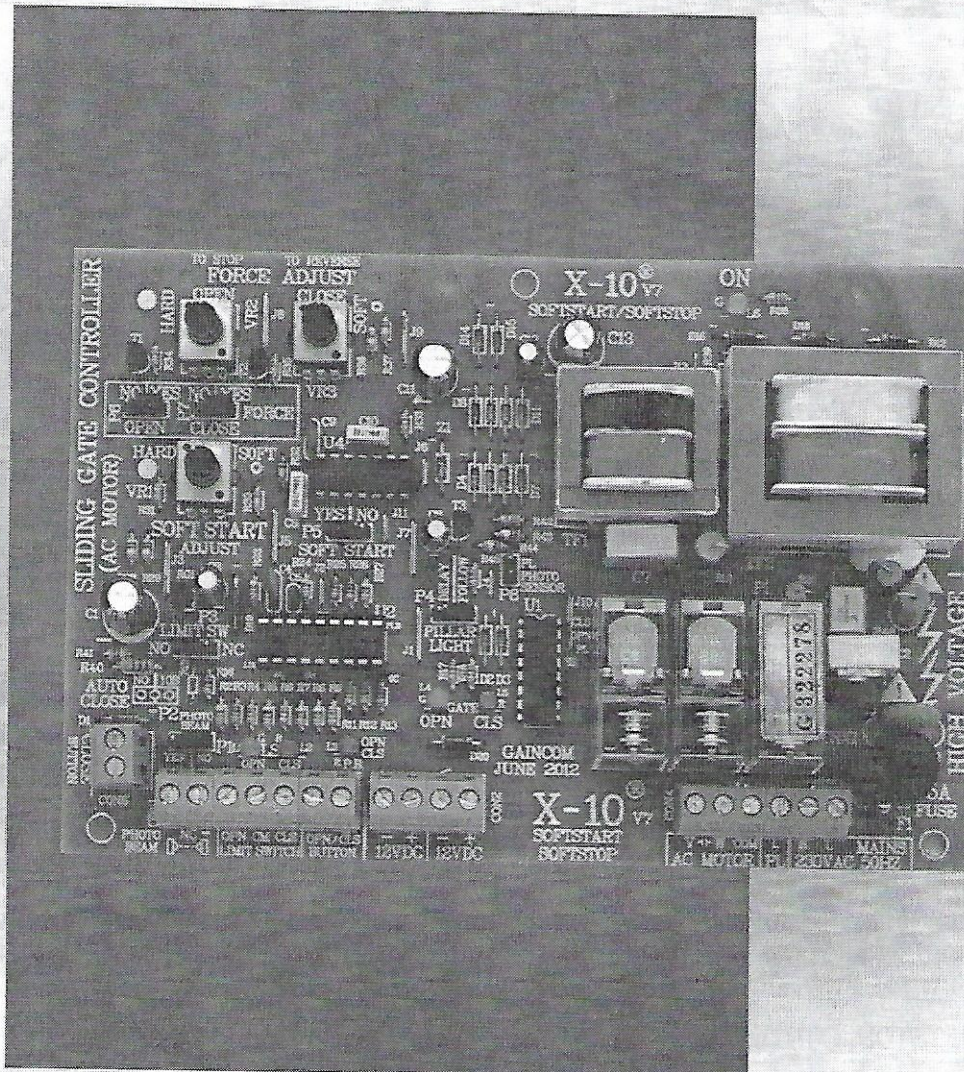

Features

- "Close Only" Function
- "Open/Close" Function (N.O.)
- Limit Switch NO/NC settings (Jumper Selectable)
- Auto Close 40s (Jumper Selectable)
- Anti-jam Safety:
 - Auto Stop on high amp during Open
 - Auto Open on high amp during Close
- Stop/Open force sensitivity adjustable.
- Soft Start (Jumper Selectable)
- Soft Start Force Adjustable
- Photobeam Function
- Receiver Function
- Pillar Light Follow or 60s Delay Selectable

GAINCOM SDN BHD (181982-U)


(Head Quarters)
Lot 1086 & 1087, Batu 1 Jalan Seremban,
Taman Woon, 73000 Tampin, NSDK, Malaysia.

Tel: 606 - 441 8941 Fax: 606 - 441 8942

(Sales & Services)
No. 531, Jalan Riang 12, Taman Gembira,
58200 Kuala Lumpur, Malaysia.

Tel: 603 - 7984 9909 Fax: 603 - 7980 7862
Email: info@gaincom.com.my
Website: www.gaincom.com.my

AC MOTOR SLIDING GATE CONTROLLER MODEL: X-10

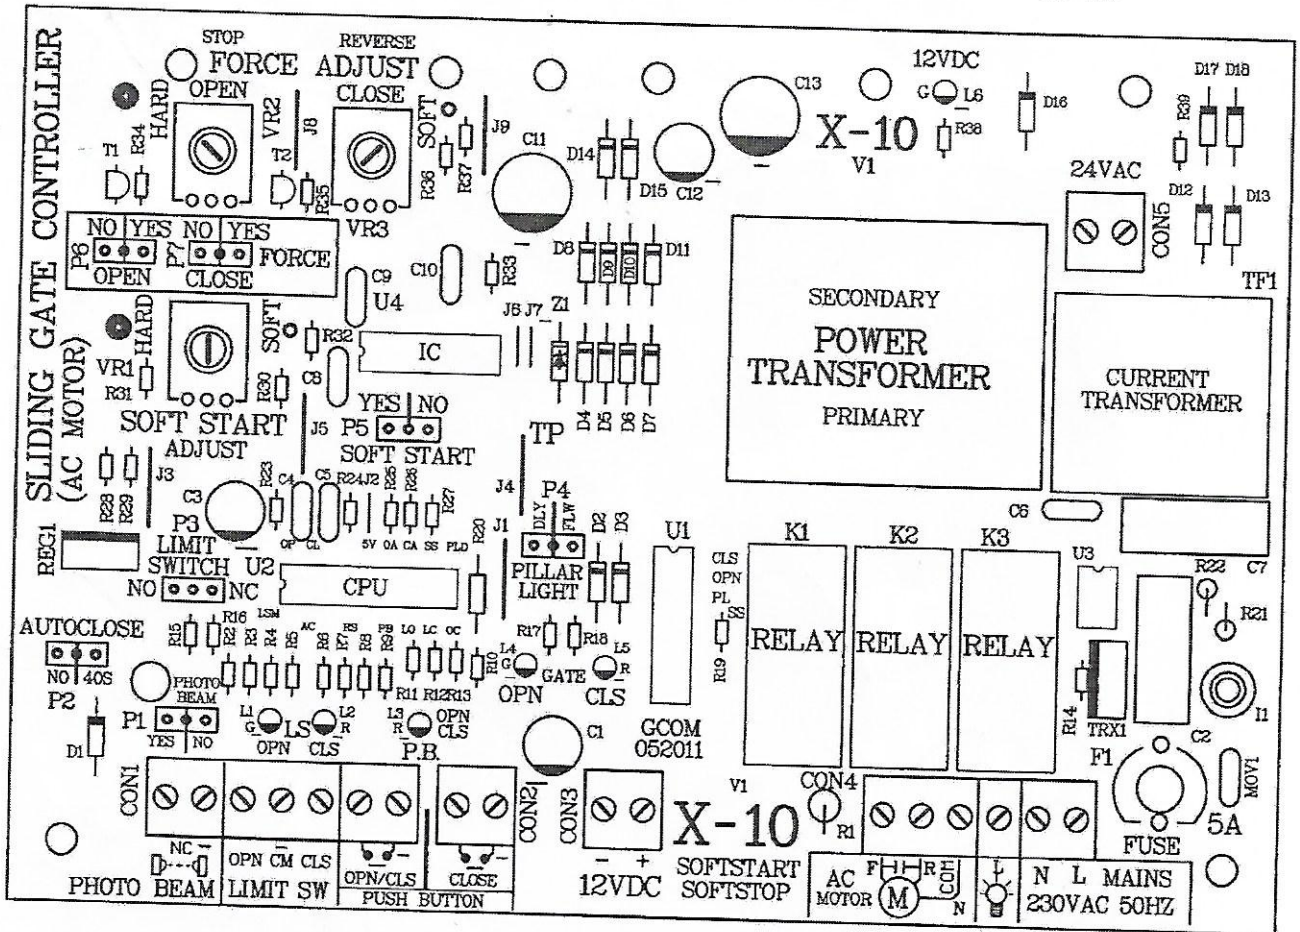

CONTROL DESCRIPTIONS

1. ANTI-JAM SAFETY MEASURE :
 VR2 : OPEN FORCE ADJUST TO STOP GATE DURING OPENING. TO OVERRIDE, SET P6 TO "NO".
 VR3 : CLOSE FORCE ADJUST TO OPEN GATE DURING CLOSING. TO OVERRIDE, SET P7 TO "NO".
 ADJUST CLOCK-WISE FOR MORE SENSITIVITY CONTROL.
2. SOFTSTART/SOFTSTOP CONTROL :
 VR1 : TURNING CLOCK-WISE FOR SOFTER STARTING/STOPPING.
 IF NOT REQUIRED, CAN BE SET BY P5 TO "NO".
3. LIMIT SWITCH MODE SELECTION :
 P3 : SET TO THE LEFT FOR "N.O.", TO THE RIGHT FOR "N.C."
4. AUTOCLOSE CONTROL :
 P2 : SET TO THE LEFT "NO", GATE WILL NOT CLOSE AFTER OPEN COMPLETELY
 IF SET TO THE RIGHT, GATE WILL AUTOCLOSE IN 40 SECONDS.
5. PHOTO-BEAM SAFETY FUNCTION (NC) :
 GATE WILL REVERSE IF BEAM IS BLOCKED DURING CLOSING.
 DURING OPENING, THE PHOTOBEAM BLOCKING IS IGNORED.
 IF THE PHOTOBEAM DEVICE IS NOT USED, SET P1 TO "NO" POSITION.
6. PILLAR LIGHT CONTROL (P4) :
 SET TO "FLW", LIGHT WILL LIT ONLY IF THE GATE IS MOVING (FOLLOW MODE).
 SET TO "DLY", LIGHT WILL LIT AS LONG AS THE GATE IS OPEN. IT WILL SWITCH OFF WITH
 A DELAY OF 60S AFTER THE GATE IS CLOSED.