

# 844

## Slide Gate Operator



---

FAAC International Inc.  
Headquarter & East Coast Operations  
5151 Sunbeam Road  
Suites 9-11  
Jacksonville, FL 32257  
Tel. 866 925 3222  
[www.faacusa.com](http://www.faacusa.com)

FAAC International Inc.  
West Coast Operations  
357 South Acacia Avenue  
Unit 357  
Fullerton, CA 92831  
Tel. 800 221 8278

**FAAC**

## CONTENTS

---

<b>IMPORTANT SAFETY INFORMATION</b>	<b>4</b>
Important Safety Instructions	4
Important Installation Instructions	4
General Safety Precautions	5
UL325 Gate Operator Classifications	6
Installing the Warning Signs	6
<b>1. DESCRIPTION &amp; SPECIFICATIONS</b>	<b>7</b>
1.1. MAXIMUM USE CURVE	7
1.2. TECHNICAL SPECIFICATIONS	8
<b>2. DIMENSIONS</b>	<b>8</b>
<b>3. ELECTRIC EQUIPMENT (STANDARD)</b>	<b>8</b>
<b>4. INSTALLING THE SYSTEM</b>	<b>9</b>
4.1. PRELIMINARY CHECKS	9
4.2. FOUNDATION PLATE INSTALLATION	9
4.5. INSTALLATION OF CHAIN PINIONS	11
<b>5. CONTROL BOARD 780D</b>	<b>12</b>
5.1. WARNINGS	12
5.2. 780D TECHNICAL SPECIFICATIONS	12
5.3. LAYOUT AND COMPONENTS	12
5.4. ELECTRIC CONNECTIONS	13
5.5. PROGRAMMING	16
<b>6. START-UP</b>	<b>19</b>
6.1. ELECTRIC CONNECTIONS	19
6.2. DEFINITION OF OPENING DIRECTION AND OPERATION OF LIMIT-SWITCH LEADS	19
6.3. DETERMINING STOP POINTS AT TRAVEL LIMIT	19
6.4. CHECK OF INPUTS	20
6.5. CHECK OF MOTOR CONNECTION	20
6.6. MECHANICAL CLUTCH ADJUSTMENT	20
6.7. CHECK OF STOP POINTS	20
6.8. SAFETY DEVICES AND ACCESSORIES CHECK	20
<b>7. FINAL OPERATIONS</b>	<b>20</b>
<b>8. MANUAL OPERATION</b>	<b>21</b>
<b>9. RESTORING NORMAL OPERATION</b>	<b>21</b>
<b>10. MAINTENANCE</b>	<b>21</b>
11.1. DISASSEMBLING THE TRANSFORMER-BOARD UNIT	21
11.2. OIL TOP-OFFS	21
<b>12. REPAIRS</b>	<b>21</b>
<b>13. 844 SPARES DIAGRAM</b>	<b>24</b>
<b>14. TROUBLESHOOTING</b>	<b>26</b>

## LIMITED WARRANTY

27



Read this instruction manual before you begin installing the product.  
= Information regarding personal safety and proper maintenance of the product.