


L5 Wiring Termination

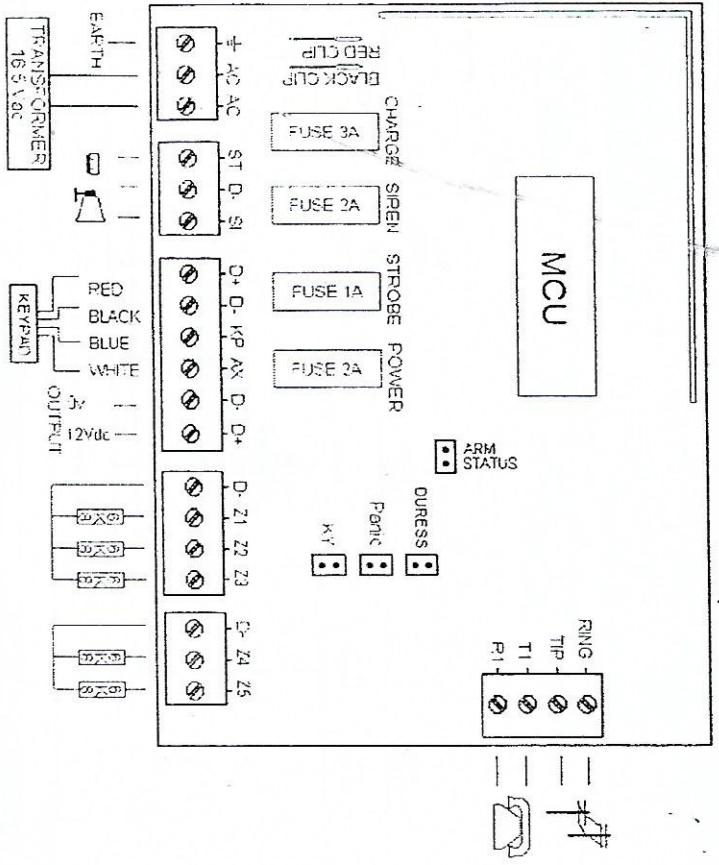

L5 Alarm System Simplified Installer Manual

- Programming:**
- Step 1 : Installer Code [111111]
 - Step 2 : Programming mode [71]
 - Step 3 : 2-digit address [??]
 - Step 4 : Value [?]
 - Step 5 : Exit [.]

Default Panel	
Address	Value
50	1 = Default CMS report setting only 8 = Default Personal report setting only 1 & 8 = Default all setting

User Code		
User	Address	Default Value
User-1 (Master)	70	0000
User-2 (Installer)	71	1111
User-3	72	
User-4	73	
User-5	74	
User-6	75	
User-7	76	
User-8	77	
User-9	78	
User-10 (Maid)	79	

CMS Account		
Address	Default Value	Max. = 4-digit Press '#' to clear previous number
80	0000	

Telephone Number		
Telephone	Address	Default Value
CMS Tel. 1 for 1 st CMS	81	
CMS Tel. 2 for 1 st CMS	82	
Personal Tel. 1	91	
Personal Tel. 2	92	
Personal Tel. 3	93	
Personal Tel. 4	94	
Personal Tel. 5	96	
Personal Tel. 6	96	
Personal Tel. 7	97	
Personal Tel. 8	98	

Max. = 16-digit!
Press '#' '1' key for #
Press '#' '2' key for #
Press '#' '3' key for #
Press '#' '#' to clear previous number
Press '#' '#' to store number
In this case, '#' '1' '#' '2' and '#' '3' are considered as 1 digit.

Personal Dialler		
Address	Default Value	1 = Dialler 7 = Emergency tones check 8 = Extra functions menu Press '#' to store option
44		

CMS Dialler		
Address	Default Value	1 = Dialler for 1 st CMS 2 = Pulse dial Test 3 = Auto daily Test 4 = CMS progress beep 7 = Restore report 8 = Bypass report Press '#' to store option
48	378	

Personal Non-Zone Setting		
Address	Default Value	2 = Siren 3 = Dialler 5 = Strobe Press '#' to store option
Panic input	14	
Low battery	16	
AC Fail	17	

CMS Non-Zone Setting		
Address	Default Value	2 = Siren 3 = Dialler 5 = Strobe Press '#' to store option
Open/Close	21	
Dures input	23	
Panic input	24	
Test input	25	
Low battery	26	
AC Fail	27	

Zone Setting 1		
Address	Default Value	1 = Delay 2 = Siren 5 = Strobe 6 = Siren 7 = Home 8 = 24-hour Press '#' to store option
Zone 1	01	
Zone 2	02	
Zone 3	03	
Zone 4	04	
Zone 5	05	

Zone Setting 2		
Address	Default Value	1-5 = sensitivity level 6 = Chime 7 = Hand-over 8 = Pulse Press '#' to store option
Zone 1	31	
Zone 2	32	
Zone 3	33	
Zone 4	34	
Zone 5	35	

Remark:
Sensitivity = (1) max sensitivity (5) min sensitivity