

General Setting 1	
Address	Default Value
45	1, 2, 3, 5, 6, 8

1 = Keypad light  
2 = Quick Away  
3 = Quick Home  
4 = Force Arm siren Continue/Squawk  
5 = AC fail delay  
6 = Quick Review  
7 = Force Arm Alarm On/Off  
8 = Quick Bypass

Press ' \* ' to store option

General Setting 2	
Address	Default Value
46	1, 2

1 = Entry beep  
2 = Exit beep  
3 = No Force Arm  
5 = Home squawk  
6 = Away squawk  
7 = Home instant  
8 = No Arm when battery low

Press ' \* ' to store option

Remark:

Address (45)  
Force Arm siren Continue (4) = ON (Continue alert)  
Force Arm siren Squawk (4) = OFF (Squawk alert)  
AC fail delay (5) = ON (After 30 minutes then to register/fail)  
AC fail delay (5) = OFF (After 1 minute then to register/fail)  
Force Arm Alarm (7) = ON (Zone not ready after exit time, siren and dialler activate)  
Force Arm Alarm (7) = OFF (Zone not ready after exit time, siren and dialler do not activate)

Address (46)  
No Force Arm (3) = ON (No arming if instant zones are not ready, except delay zone)  
No Force Arm (3) = OFF (Force Arm activated)

Timer Setting		
	Address	Time
Siren squawk time	51	050
Non zone sensitivity	52	002
Entry time	53	005
Exit time	54	030
Siren time	55	005
System time (hour)	56	000
System time (minute)	57	000
Auto daily test (hour)	59	003
Auto daily test (minute)	60	000
Auto Arm (hour)	87	255
Auto Arm (minute)	88	255
Auto Disarm (hour)	89	255
Auto Disarm (minute)	90	255

Min - Max  
000 - 100  
000 - 255  
000 - 023  
000 - 059  
000 - 023  
000 - 059  
000 - 023  
000 - 059  
000 - 023  
000 - 059

Remark:  
Non zone sensitivity (52) = (001) max sensitivity (008) min sensitivity

Miscellaneous Setting		
	Address	Default Value
Panel reset	59	188
Group CMS dial attempt	61	008
Group Personal dial attempt	62	004
Number of rings to answer	63	015
Zone pulse count	64	002
Zone pulse time window	65	090
Anti-take over	67	014

Min - Max  
000 - 010  
000 - 010  
001 - 015  
000 - 010  
000 - 090

Remark:  
Number of rings to answer (63) = 000 (Disable Call-in)  
Number of rings to answer (63) = 099 (Fax bypass)  
Anti-take over (67) = 013 (ON)  
Anti-take over (67) = 014 (OFF)

### Call-In Block Diagram

