



Quick Operation Reference

Default Installer Code	[1111]
Default Master Code	[0000]
Away Arm	[User Code][9] or [User Code][AWAY]
Home Arm	[User Code][8] or [User Code][HOME]
Quick Away Arm	[#][AWAY] or [#][9]
Quick Home Arm	[#][HOME] or [#][8]
Disarm	[User Code][0]
Bypass	[User Code][6][Zone Number][*]
Quick Bypass	[#][6][Zone Number][*]
Review	[User Code][4]
Quick Review	[#][4]
Walk-test	[Installer Code][5]
System Test	[Installer Code][3]
Panic alarm	[#][PANIC] or [#][1]
Duress alarm	[User Code with Last Digit + 1][0]

Reset Installer Code

- Short KY/C pin for 3 seconds during power-up to default installer code back to [1111]
- Keypad will beep 3 times and remove from shorting the pins immediately
- If address location 68 is set to value 013, then the installer code cannot be reset.

Enter Program Mode

Enter Program mode

```
[ Installer Code ][ 7 ][ Address ][ Value ] [ * ] [ * ]
program mode store exit
```

Panel Default Setting

- Default CMS only [Installer Code][7][50][1][*]
- Default Personal only [Installer Code][7][50][8][*]
- Default all address to factory default [Installer Code][7][50][1][8][*]

Enable Personal Report and Personal Dialing Setting

- Turn ON Personal Dialer [Installer Code][7][44][1][*][*]
 - (LED1 ON = Dialer ON, LED1 OFF = Dialer OFF)
- Program personal telephone number 1 [Installer Code][7][91][Tel. Number][*][*]
- Program personal telephone number 2 [Installer Code][7][92][Tel. Number][*][*]
 - * Address 91 to 98 is for personal telephone number 1 to 8 respectively. Max Tel. Number is 16 digits

Disable Personal Report and Clear Personal Dialing Setting

- Turn OFF Personal Dialer [Installer Code][7][44][1][*][*]
 - (LED1 ON = Dialer ON, LED1 OFF = Dialer OFF)
- Delete personal telephone number 1 [Installer Code][7][91][#][#]
- Delete personal telephone number 2 [Installer Code][7][92][#][#]
 - * Address 91 to 98 is for personal telephone number 1 to 8 respectively