

Enable CMS Report and CMS Dialing Setting

Turn ON 1st CMS Dialer
[Installer Code][7][48][1][*][*]
(LED1 ON = Dialer ON, LED1 OFF = Dialer OFF)
Program 1st CMS account number
[Installer Code][7][80][ACC. Number][*][*]
Program 1st CMS telephone number 1
[Installer Code][7][81][Tel Number][*][*]
Program 1st CMS telephone number 2
[Installer Code][7][82][Tel Number][*][*]
*ACC Number is 4 digits, Max. Tel Number is 16 digits

Disable CMS and Clear CMS setting

Turn OFF 1st CMS Dialer
[Installer Code][7][48][1][*][*]
(LED1 ON = Dialer ON, LED1 OFF = Dialer OFF)
Clear 1st CMS account number
[Installer Code][7][80][#]
(Cleaning of CMS account number will reset the CMS account number to 0000)

Delete 1st CMS telephone number 1
[Installer Code][7][81][#][#]
Delete 1st CMS telephone number 2
[Installer Code][7][82][#][#]

Change Installer, Master & User Code

Change Master Code (User1)
[Installer Code][7][70][4 Digits Code][*]
Change Installer Code (User2)
[Installer Code][7][71][4 Digits Code][*]
Change User3 Code
[Installer Code][7][72][4 Digits Code][*]
Change User4 Code
[Installer Code][7][73][4 Digits Code][*]
*Address 70 to 79 is for User1 to User10 respectively

Delete User Code

Delete User3 Code
[Installer Code][7][72][#]
Delete User4 Code
[Installer Code][7][73][#]
*Address 72 to 79 is for User3 to User10 respectively

Zone Setting

Program Zone1 as Delay or Instant zone
[Installer Code][7][01][1][*]
(LED1 ON = Zone1 is delay zone, LED1 OFF = Zone1 is instant zone)
*Address 01 to 05 is address of delay/instant setting for Zone1 to Zone5 respectively

Program Zone1 as 24Hours zone
[Installer Code][7][01][8][*]
(LED8 ON = 24hours zone enabled, LED8 OFF = 24hours zone disabled)
*Address 01 to 05 is address of 24 hours zone setting for Zone1 to Zone5 respectively

Program Zone1 as Handover zone
[Installer Code][7][31][7][*]
(LED7 ON = Handover zone enabled, LED7 OFF = Handover zone disabled)
*Address 31 to 35 is address of Handover zone setting for Zone1 to Zone5 respectively

Exit & Entry Delay Time Setting

Program Entry time
[Installer Code][7][53][3 Digits Value][*]
Program Exit time
[Installer Code][7][54][3 Digits Value][*]
Fax Bypass Setting
[Installer Code][7][63][099][*][*]
Fax Bypass setting
[Installer Code][7][63][099][*][*]
*Call in once and hang up, then the system will pickup the call on 2nd call

Number of Rings Setting

Program number of rings to answer
[Installer Code][7][63][Value][*][*]
(Applicable value is from 001 to 015)

Quick Function Setting

Turn ON/OFF Quick Away Arm
[Installer Code][7][45][2][*][*]
(LED2 ON = Quick Away enabled, LED2 OFF = Quick Away Disabled)
Turn ON/OFF Quick Home Arm
[Installer Code][7][45][3][*][*]
(LED3 ON = Quick Home enabled, LED3 OFF = Quick Home Disabled)
Turn ON/OFF Quick Review
[Installer Code][7][45][6][*][*]
(LED6 ON = Quick Review enabled, LED6 OFF = Quick Review Disabled)
Turn ON/OFF Quick Bypass
[Installer Code][7][45][9][*][*]
(LED8 ON = Quick Bypass enabled, LED8 OFF = Quick Bypass Disabled)

Arm & Disarm Siren Squawk Setting

Turn ON/OFF Away Arm Squawk
[Installer Code][7][46][6][*][*]
(LED6 ON = Away Squawk enabled, LED6 OFF = Away Squawk Disabled)
Turn ON/OFF Home Arm Squawk
[Installer Code][7][46][5][*][*]
(LED5 ON = Home Squawk enabled, LED5 OFF = Home Squawk Disabled)
*After activating Siren Squawk, Arm produce 2 beeps, Disarm produce 1 beep

Program System Time

Program System Time (hour)
[Installer Code][7][56][3 digits Value][*][*]
Program System Time (minute)
[Installer Code][7][57][3 digits Value][*][*]
*24-hour format

Program Auto Away Arm & Auto Disarm

Program Auto Away Arm Time (hour)
[Installer Code][7][87][3 digits Value][*][*]
Program Auto Away Arm Time (minute)
[Installer Code][7][88][3 digits Value][*][*]
Program Auto Disarm Time (hour)
[Installer Code][7][89][3 digits Value][*][*]
Program Auto Disarm Time (minute)
[Installer Code][7][90][3 digits Value][*][*]
*24-hour format, program 255 to disable Auto Away Arm & Auto Disarm