

Quick Operation Reference

Away Arm	[User Code][9] or [User Code][AWAY]
Home Arm	[User Code][8] or [User Code][HOME]
Quick Away Arm	[#][AWAY] or [#][9]
Quick Home Arm	[#][HOME] or [#][8]
Disarm	[User Code][0]
Bypass	[User Code][6] [Zone Number] [*]
Quick Bypass	[#][6] [Zone Number] [*]
Review	[User Code][4]
Quick Review	[#][4]
Walk-test	[User Code][5]
Panic alarm	[#][PANIC] or [#][1]
Duress alarm	[User Code with Last Digit + 1][0]

Programming

Enter programming mode
 Change Master Code

Program telephone number 1
 Delete telephone number 3

Program Entry time
 Program Exit time

Program system time (hour)
 Program system time (minute)
 Program auto arm time (hour)
 Program auto arm time (minute)
 Program auto disarm time (hour)
 Program auto disarm time (minute)

Program auto disarm time (minute)
 Program auto disarm time (hour)

* Address 91 to 99 is for personal telephone number 1 to 8 respectively. Max. Tel. Number is 16 digits
 * Address 70 is Master user, Address 72 to 79 is for user 3 to 9 respectively
 * Entry and exit time are in unit second. Eg. 50 seconds is "050"
 * System time, auto arm & disarm time are 24-hour format. Eg. 10:30pm is "022" and "030"