


# USER MANUAL

## assemble guideline

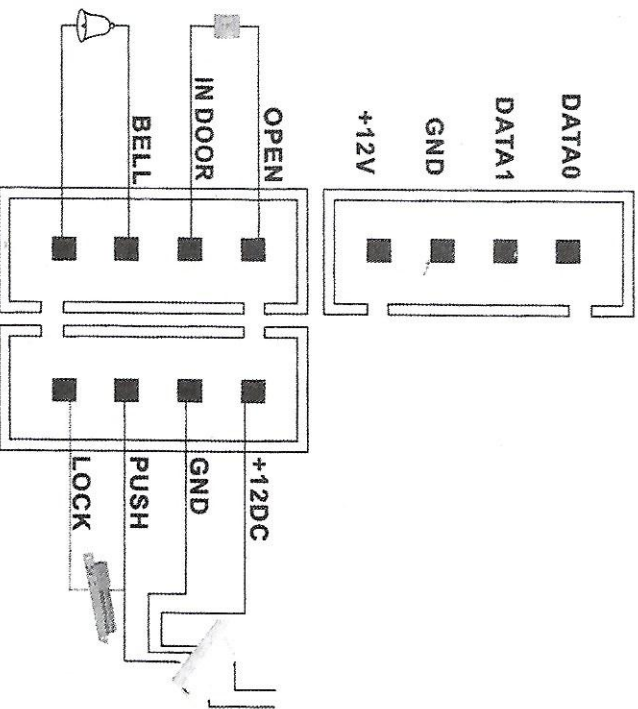

**assemble guideline**  
Discharge front board and "ten" -like screw in bottom board, then take off bottom board, assemble bottom board in side of entry with plastic inserts and screws.  
how to connect electrical wire:

Connect wire with reference to routine mark in electrical board.

Caution! Before power on, must check voltage of power supplier and cathode and positive

### REMARK:

Warning alarm switch is at right bottom side, voice died with door closed, then spring out buzzer and make continuous warning.

### operation guidelines

access controller initialization:

after power off, connect bin 2 and bin 3 of PESET

Supply power, buzzer make continuous warning alarm, power light(red light), OK(green) light and Model(orange) light all flash.

cut off power, then connect power supply, All lights, including POWER, OK and Mode, flash, waiting for exchanging PESET switch

Bin 2 and Bin3 disconnected, Bin 1 and Bin 2connected.

Access controller initialization is completed, after a voice of buzzer, controller will be available for user.

### REMARK:

Initialization only modify system password to default password(default when ex-work), other data will not changed.

### electrical lock assembling:

When connect Bin 1 and Bin 2, open signal is outputted( power on and door open); When connect bin 2 and bin 3, close signal is outputted(power off and door closed); drive voltage for electrical lock is 12V.