

### 【1】 CLEAR THE CODE:

BE SURE TO PRESS THE "UP BUTTON" AND "DOWN BUTTON" OF THE REMOTE CONTROL THAT WE SENT TO YOU AT THE SAME TIME (THE TWO BUTTONS IN THE UPPER ROW), SEE THE REMOTE CONTROL INDICATOR LIGHT FLASHING QUICKLY AND CONTINUOUSLY, OPEN YOUR HAND, IT MEANS THAT THE CODE CLEARING IS SUCCESSFUL. NOTE: THE INDICATOR LIGHT SHOULD MOVE INSIDE CONTINUOUSLY, PRESS THE REMOTE CONTROL IF THE INDICATOR OF ANY KEY OF THE DEVICE GOES OUT, IT MEANS THAT THE CODE IS CLEARED SUCCESSFULLY. CLEAR THE CODE IN ABOUT TWO OR THREE SECONDS. IF THERE IS NO LOGIC CONTROLLER AND THE INDICATOR LIGHT DOES NOT KEEP FLASHING, IT MEANS THAT THEY ARE NOT PRESSED AT THE SAME TIME. TRY SEVERAL TIMES TO COMPLETE THE CODE CLEARING.

清码：一定要同时按下我们发给您的遥控器“上键”与“下键”（上排的两个按键），看到遥控器指示灯快速不停的闪动，之后在松开您的手，即表示清码成功。注意：指示灯要不停的闪动，按下遥控器任意键指示灯熄灭就表示清码成功。清码两三秒左右就可以完成，如果没有遥控器指示灯没有不停的闪烁代表没有同时按下，可多试几次从而完成清码。

### [2] DUPLICATE:

ONE CAN USE THE EVASIVE CONTROL DEVICE IN THE HAND AND THE REMOTE CONTROL PURCHASED BY RONG. OUR REMOTE CONTROL HEAD IS FACING YOUR OWN REMOTE CONTROL WAIST (2 REMOTE CONTROL RISE), KEEP PRESSING THE "DOOR OPEN BUTTON" CORRESPONDING TO THE TWO REMOTE CONTROLS, AND WAIT UNTIL YOU SEE THE PURCHASED REMOTE CONTROL IF THE INDICATOR LIGHT KEEPS FLASHING, IT MEANS THAT THE KEY IS COPIED SUCCESSFULLY. FOLLOW THE SAME METHOD IN TURN, AND SET THE OTHERS: COPY THE KEYS. NOTE: IF THE LIGHT DOES NOT FLASH WHEN COPYING, ON THE TWO REMOTE CONTROLS AFTER PRESSING ALL THE KEYS ON THE FRONT SIDE, DO NOT LET GO OF BOTH HANDS, AND THEN HOLD THE COPY REMOTE DIGGING DEVICE IN YOUR SELF MY REMOTE CONTROL ZHOU GUO LOOKS FOR SIGNALS, AND CAN CHANGE SEVERAL POSITIONS, SUCH AS HEAD TO HEAD AND BACK TO ON THE BACK, AFTER SEEING THE LIGHT KEEP FLASHING, IT MEANS THAT THE SIGNAL HAS BEEN COPIED. (REMOTE CONTROL COPY AFTER THE SHELL IS SUCCESSFUL, PRESS ANY KEY AND THE INDICATOR LIGHT IS ALWAYS ON! )

对拷：一个手拿能用的遥控器一个手拿购买的遥控器，用我们的遥控器头部对着你自己遥控器腰部（2个遥控器顶住靠在起），一直按着两个遥控器对应的“开门键”，等看到购买的遥控器指示灯不停闪动即表示这个按键复制成功。依次按相同方法，将其它：个按键拷贝上去。注意：拷贝的时候灯如果不闪动，在两个遥控器上面的键都按下去后，两个手都不要松开，然后拿着拷贝遥控器在您自己的遥控周围找信号，可以变换几个位置，比如头对着头，背部对着背部，看到灯不停闪动后就表示已经拷贝到这个信号了。（遥控器拷贝成功后按任意一键指示灯都是长亮！）



# AC ROLLER SHUTTER REMOTE

USER MENU

